

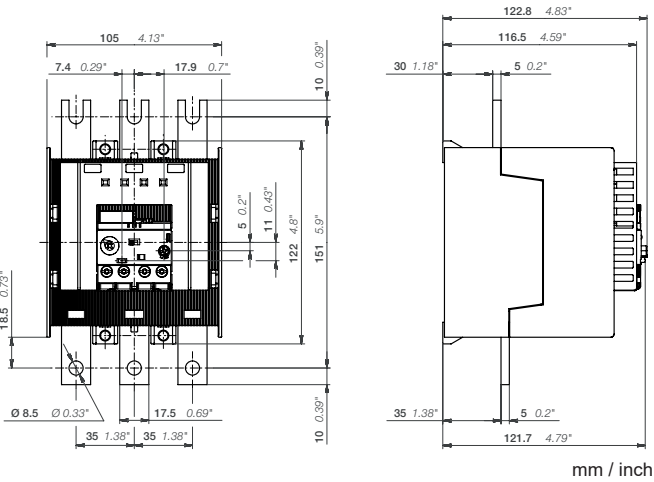


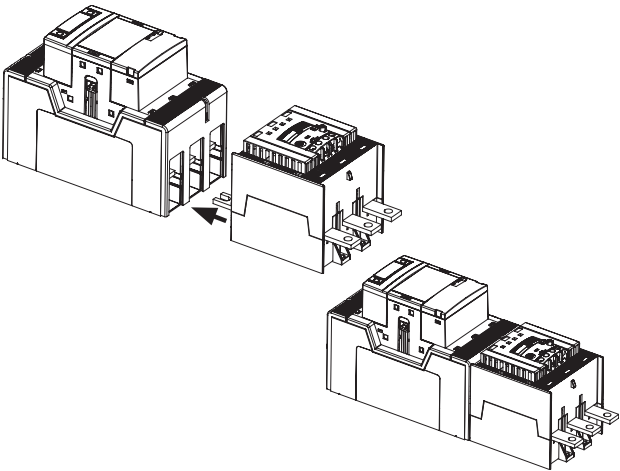


mm / inch

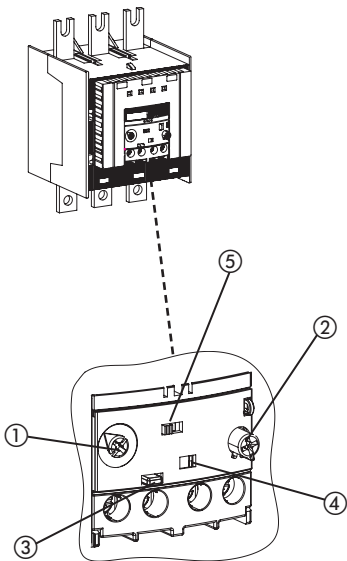

① **I_{nom}**
en Setting the relay to rated current of the motor

ST
en Self test; Motor nominal current must be > 80% of the lowest set current range.


Trip class	10E	20E	30E
Trip time	< 100 s	< 180 s	< 250 s

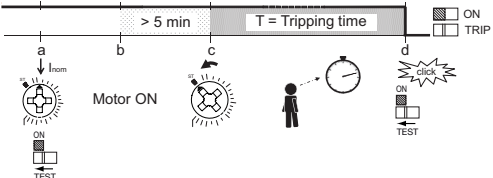

② **RESET**


-Man

-Auto

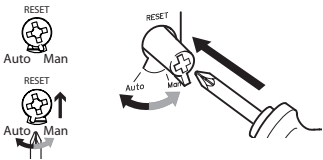


en In case of adjusting “RESET Auto”, which means automatic reset after tripping, the motor may restart automatically. This automatic restart could injure persons and damage material.

③ **STOP**

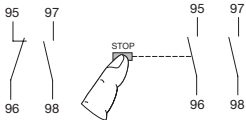


④ **TEST**


 


⑤ **CLASS**

en Trip class setting

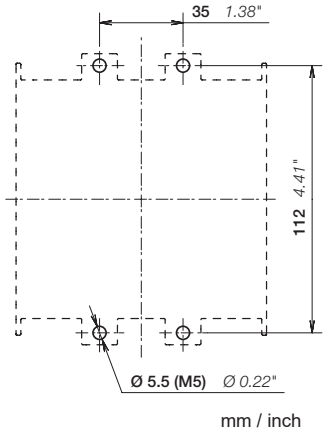

mm / inch

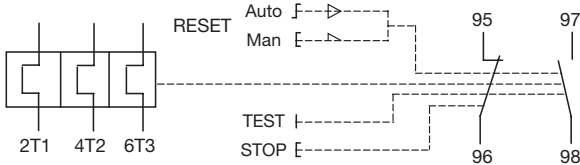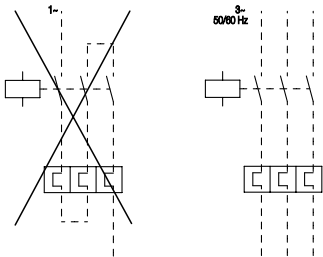

B90NE								
2T1 4T2 6T3	M8 18 Nm 160 lb.in	-	-	1 x 16 ... 185 mm ² 2 x 16 ... 120 mm ²	1 x 16 ... 185 mm ² 2 x 16 ... 120 mm ² 1/2 x AWG 6 ... 0000	-	-	Ø > 8 mm L ≤ 24 mm
95 - 96 97 - 98	M3.5 0.8...1.2 Nm 7 ... 11 lb.in	5.5 mm	Pozidriv 2	1/2 x 1 ... 4 mm ²	1/2 x 0.75 ... 2.5 mm ² 1/2 x AWG 18...10	1/2 x 0.75 ... 2.5 mm ²	9 mm	-